


THE PARTS OF YOUR BLIND

HOW TO INSTALL CENTER SUPPORT BRACKETS


For Use on wider Mini Blinds

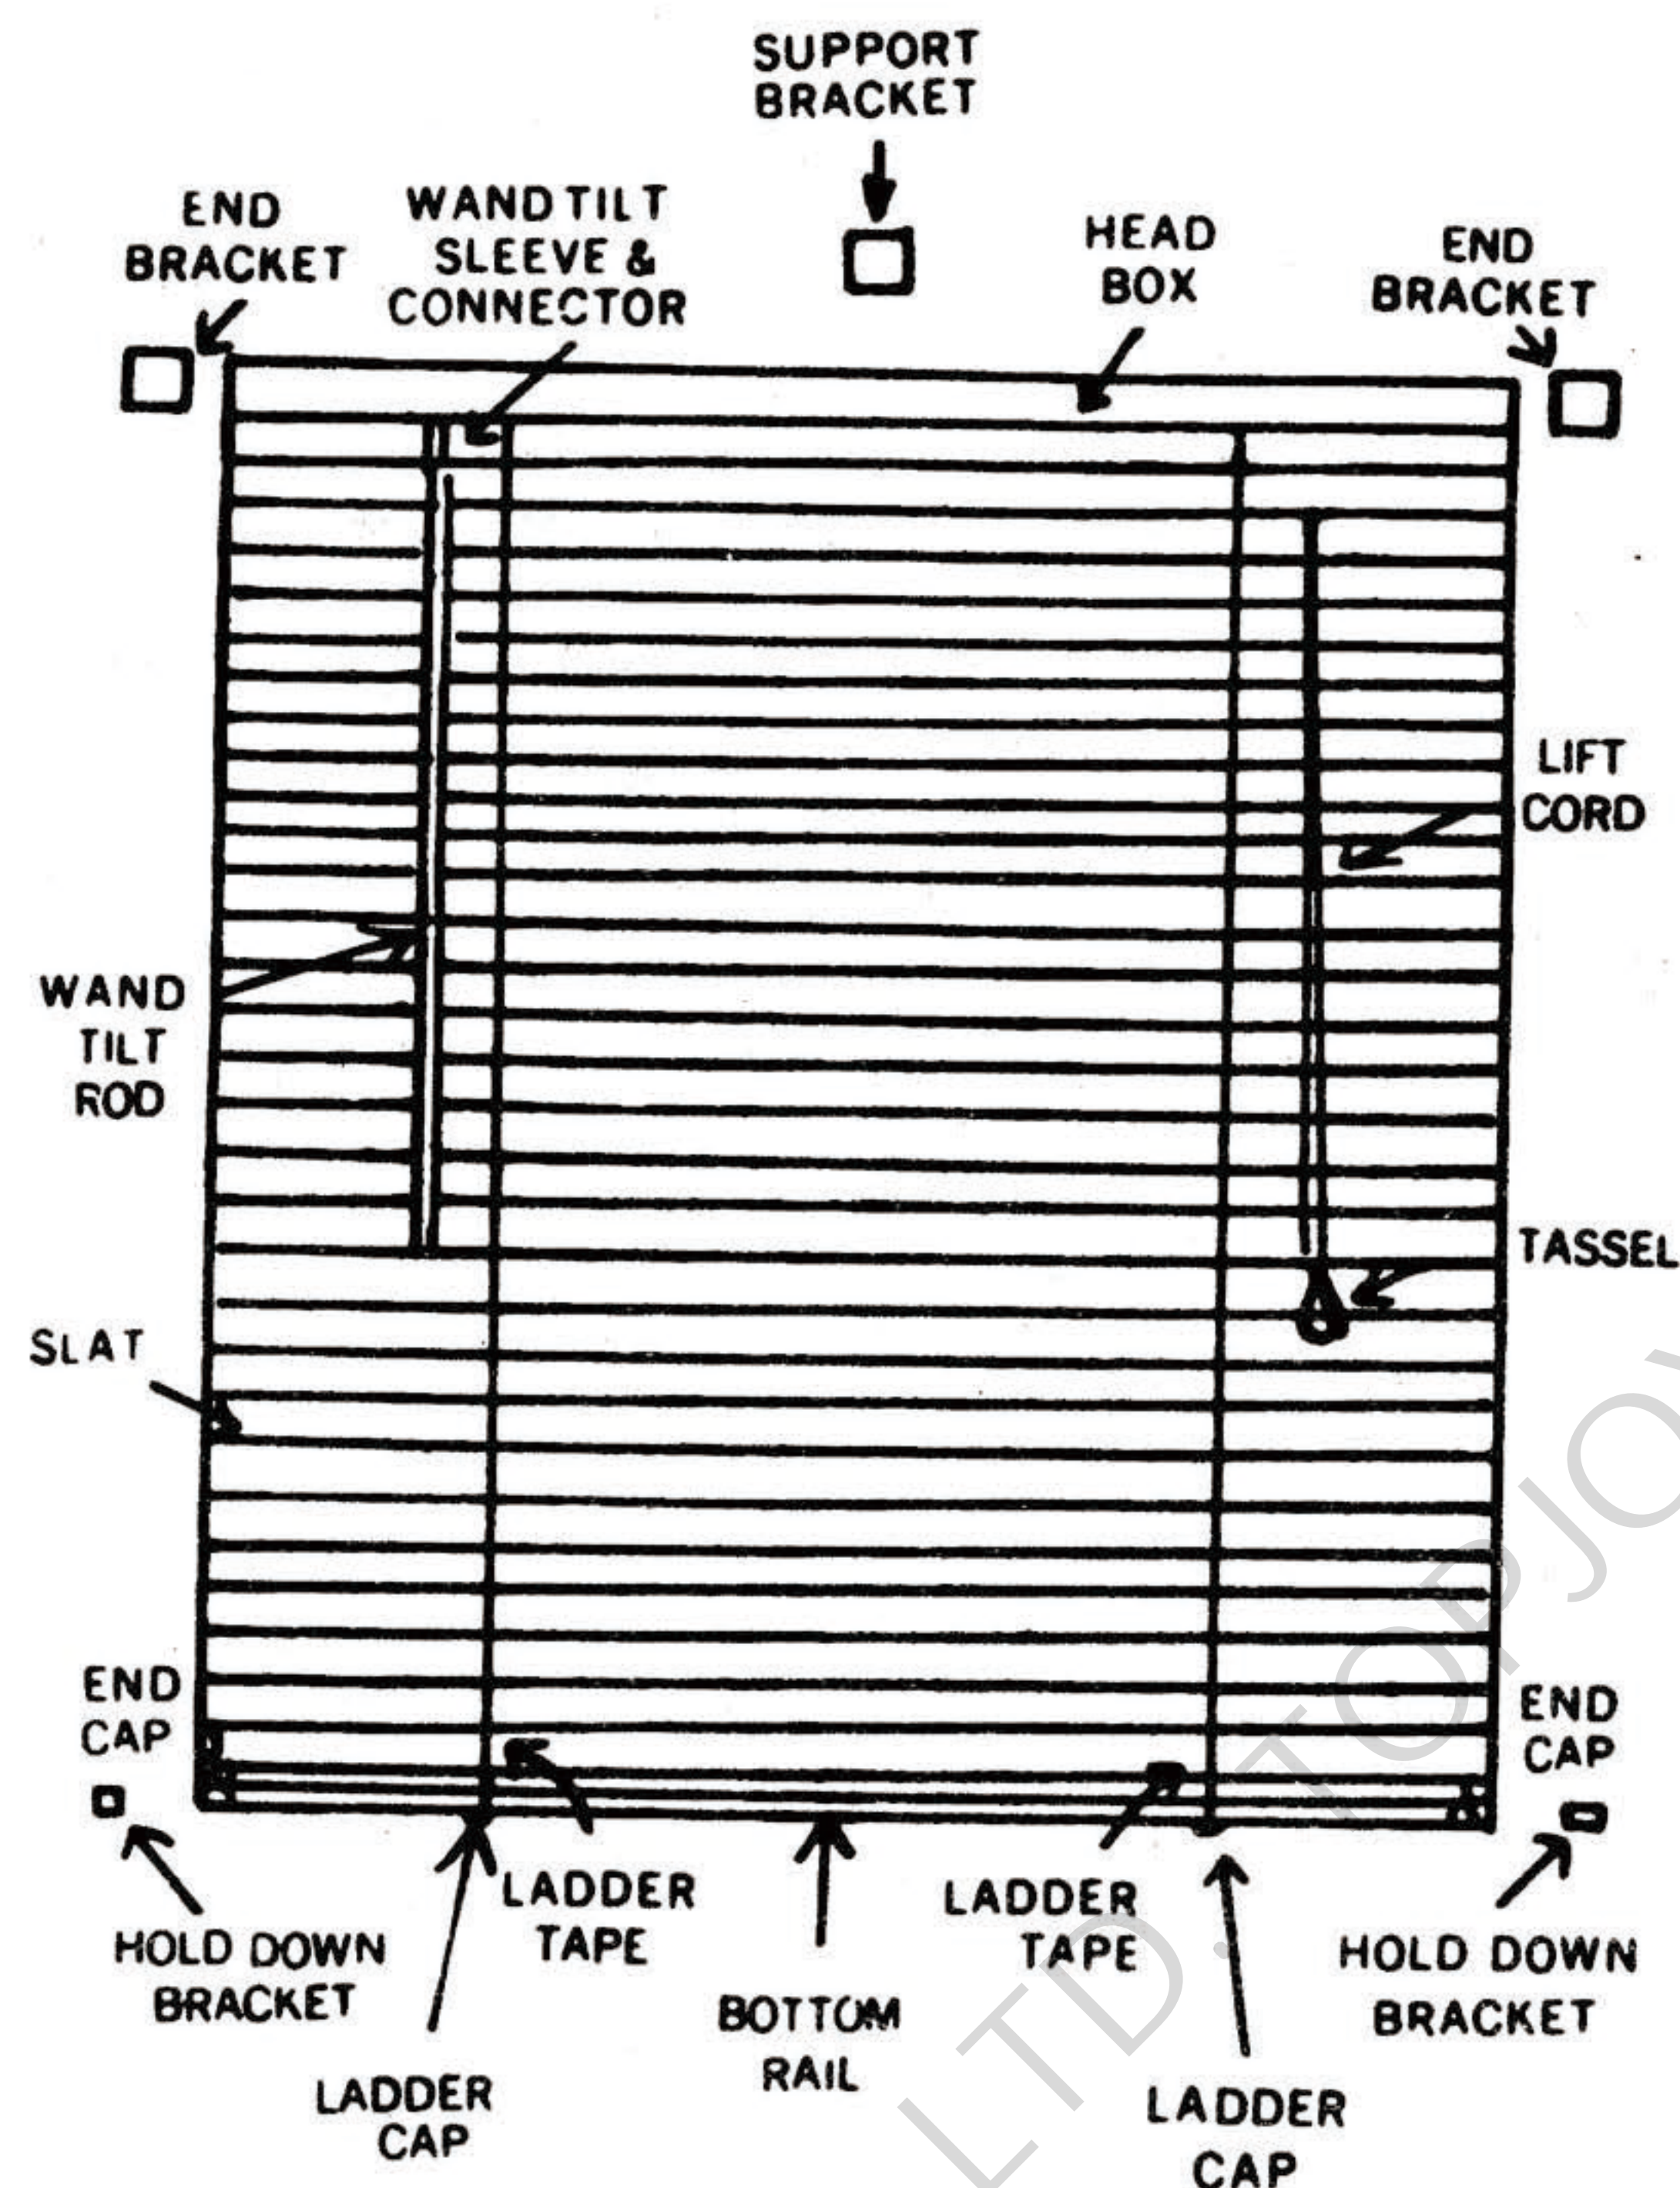

How to Install Safety Cord Stops

Make sure blind has been installed as directed by manufacturer, and head rail is securely fastened. Lower blind fully or to maximum length desired. 1. Grasp one lift cord and create a loop just below the headrail. Insert loop into the cord stop. Slide cord stop to approximately 2 inches below head rail. 2. Holding cord stop in position, insert tassel through loop created in Step 1, and pull tassel until knot is formed around the cord stop. 3. Cord stop and knot should now be 1-2 inches below the head rail. Continue holding the cord stop in position, and tighten knot by pulling firmly on tassel. Repeat steps above for EACH lift cord.

You must install these cord-stops before using blinds.

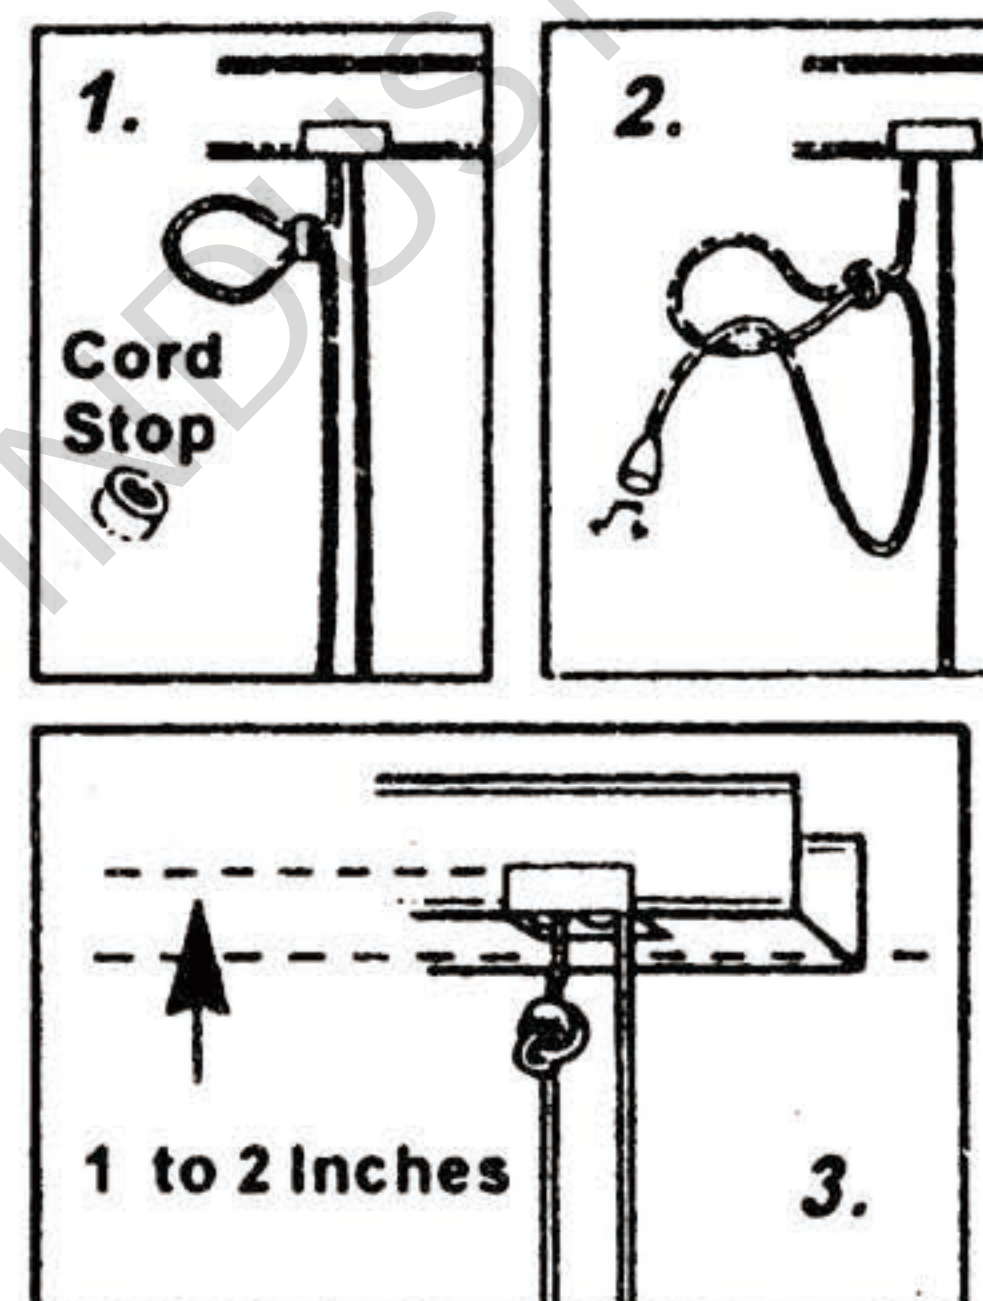

1. First install end brackets "A" & "B" per instructions included with Blind (See Illustration # 1).
2. Center Support Bracket "C" should line up with top of Mounted End Brackets (See Illustration # 1).

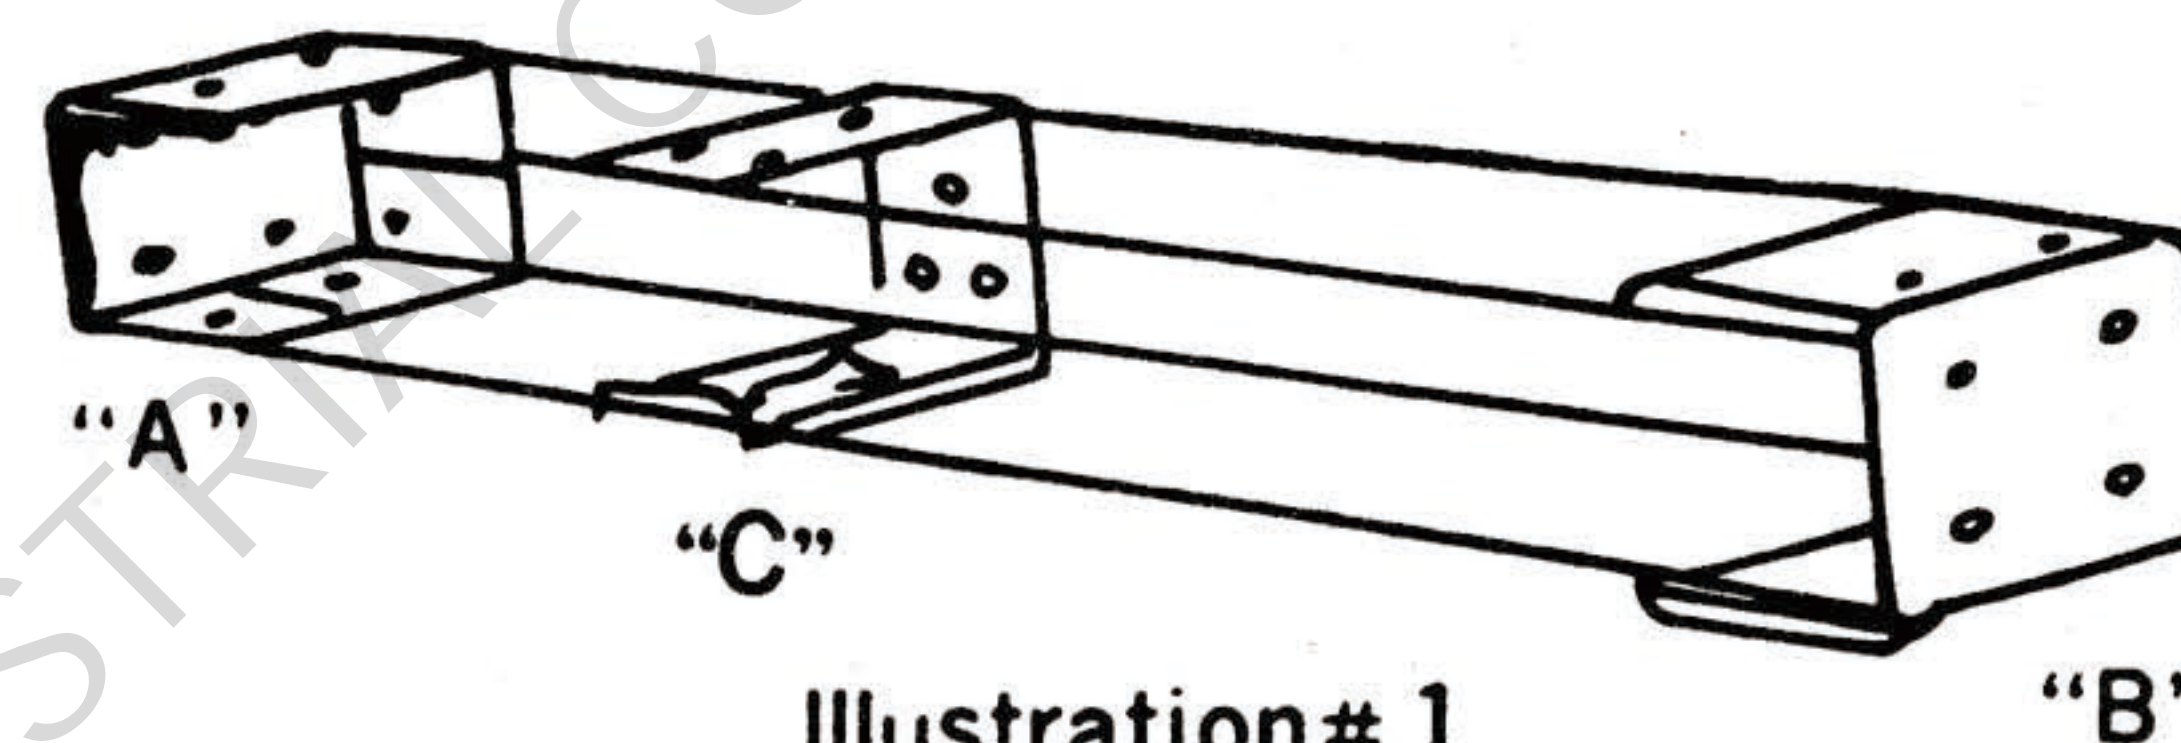


Illustration # 1

3. Center Support Bracket can be installed as Inside Mounted or Outside Mounted (See Illustration # 2).

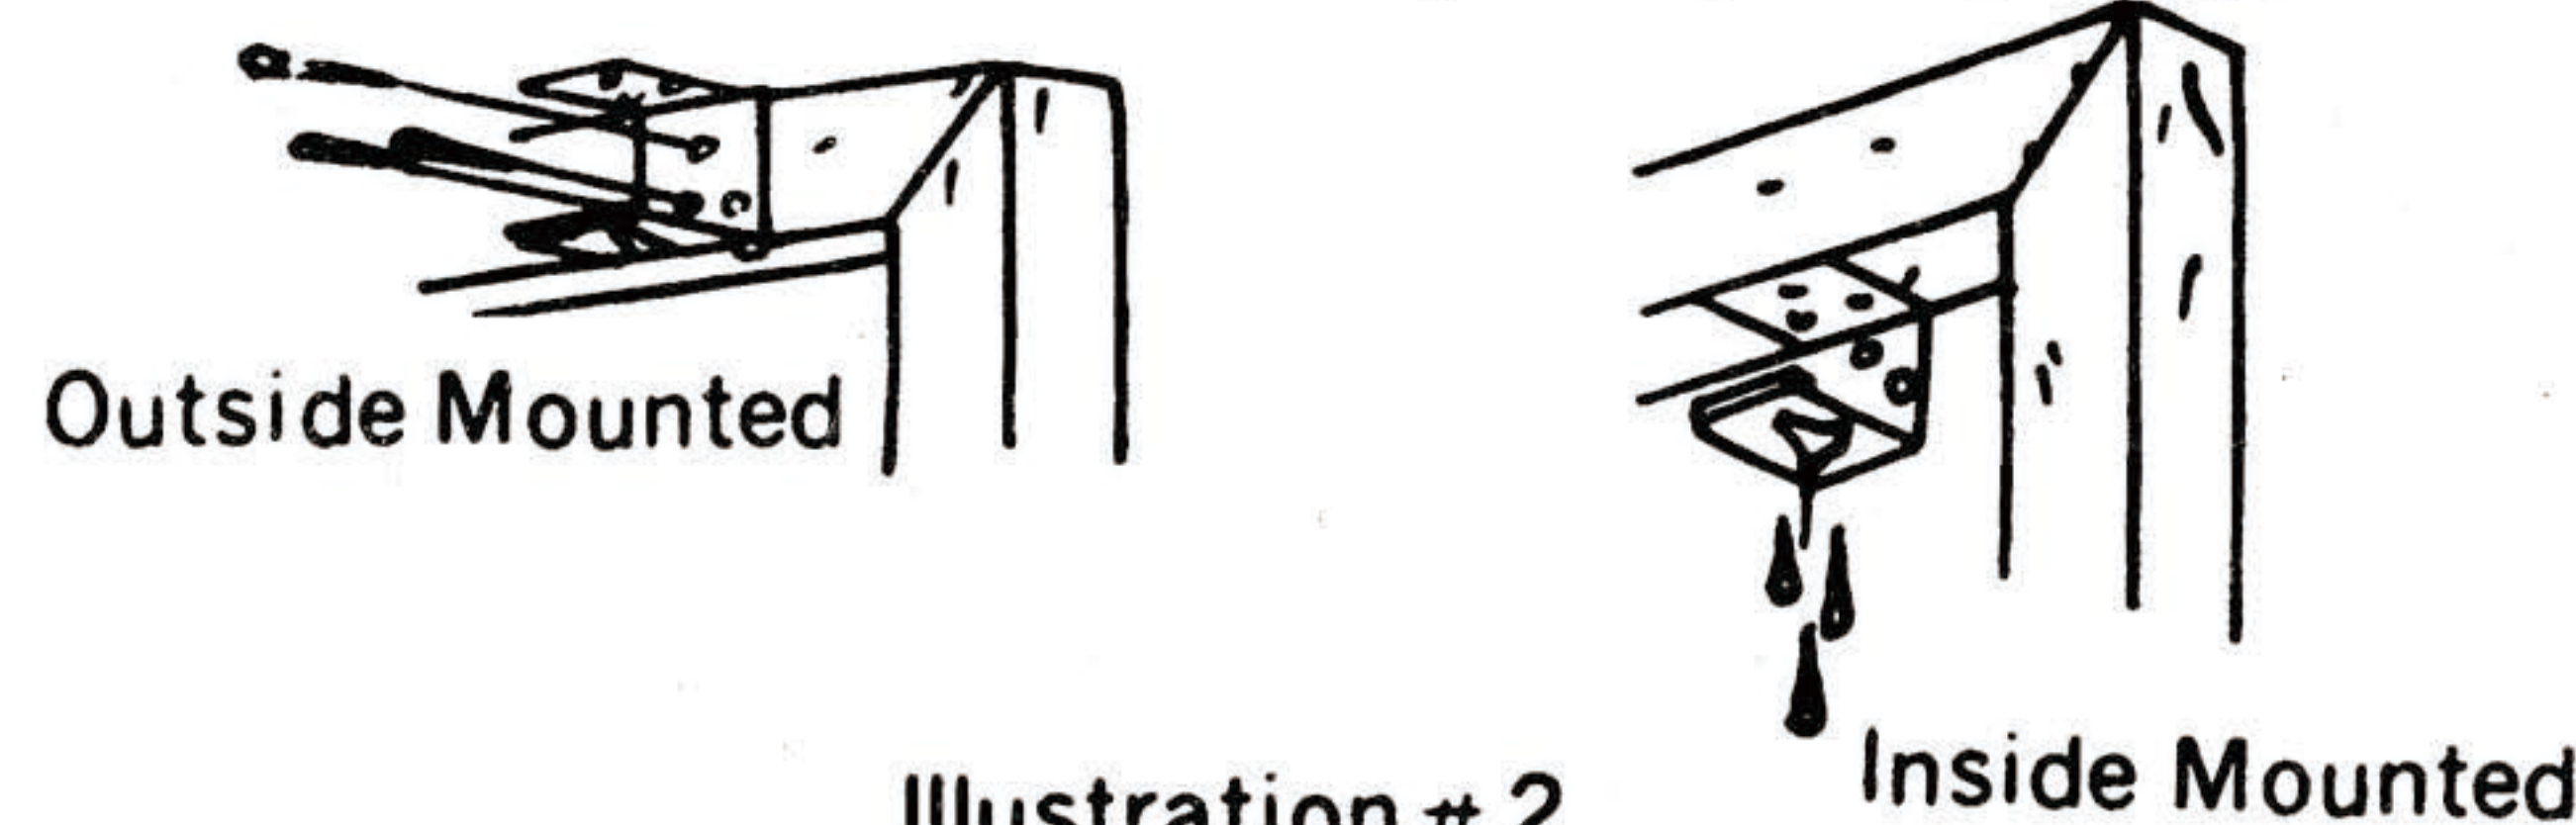


Illustration # 2

4. The lip of the Bracket must always be on the bottom to mate with the Pre-Cut Slots on Headrail.
5. Install the Bracket at the right position to meet the Pre-Cut Slot on Headrail.
6. Please be sure that the lip of the Bracket is snugly inserted in the Pre-Cut Slot on Headrail (See Illustration # 3).

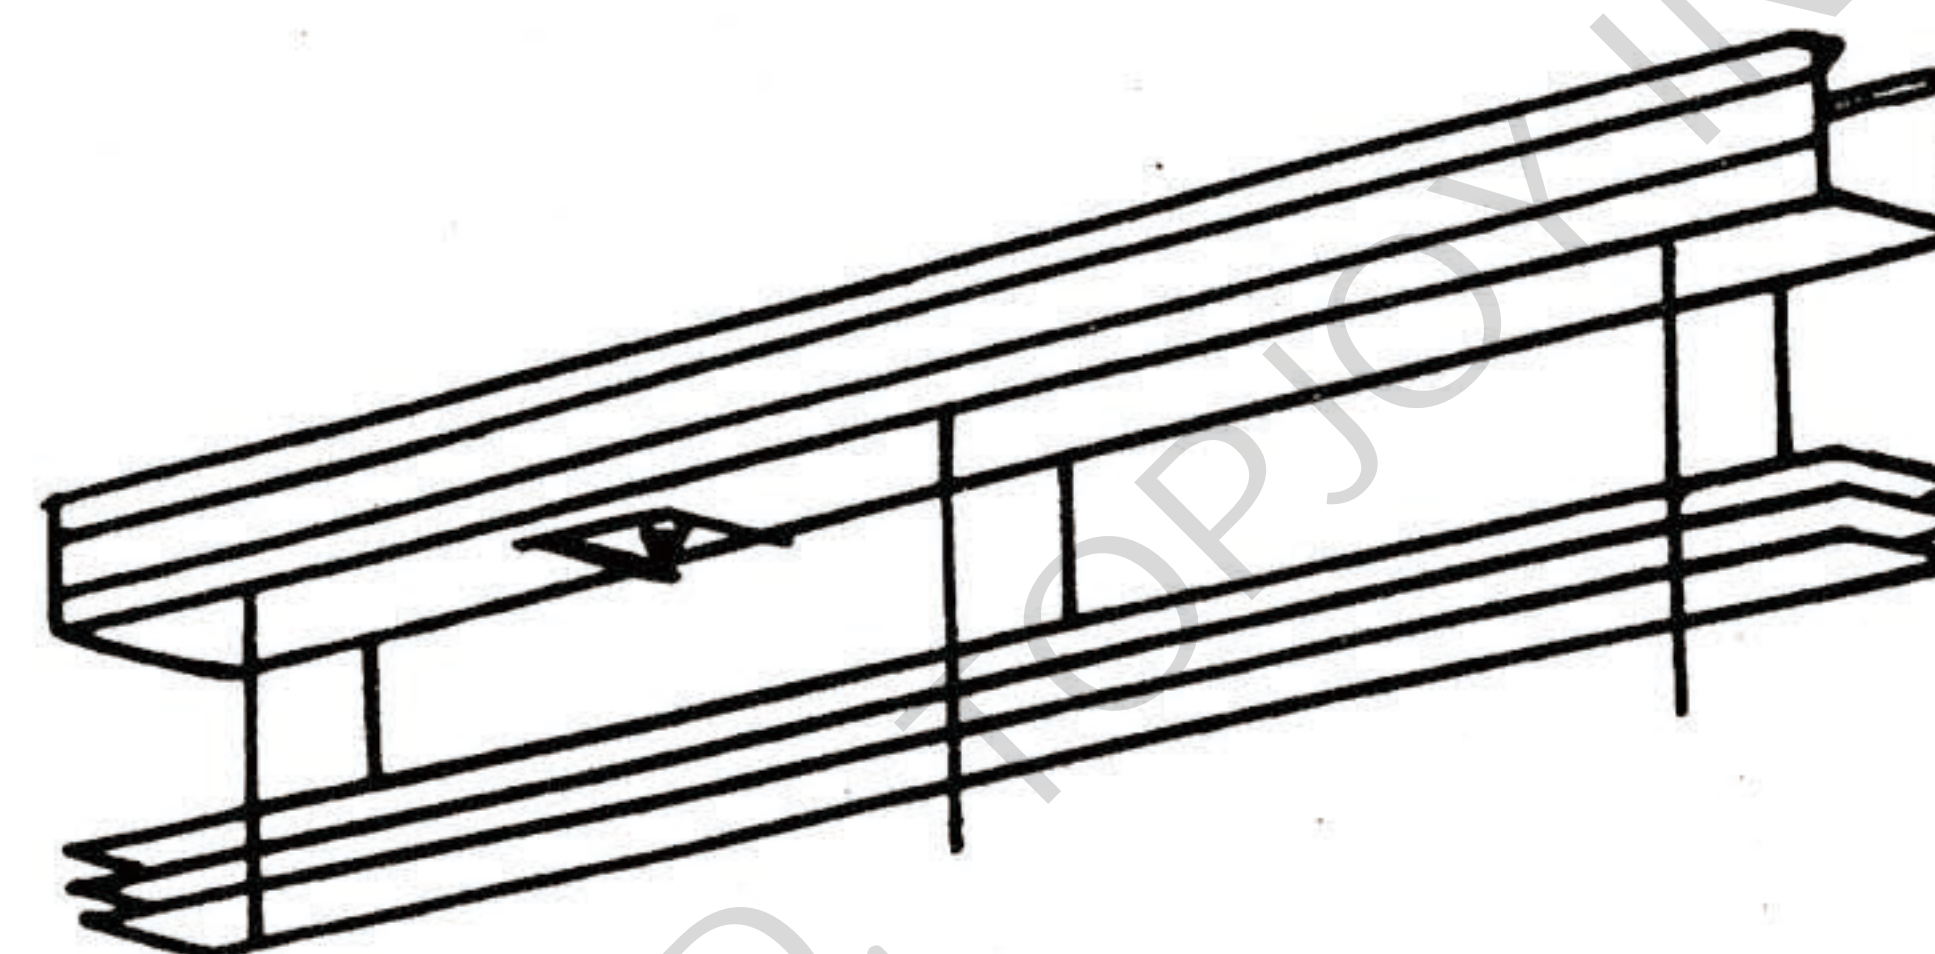



Illustration # 3

⑥

1" VINYL MINI BLINDS

INSTALLATION INSTRUCTIONS

Before installing your new blind, read all instructions carefully and become familiar with accessories enclosed

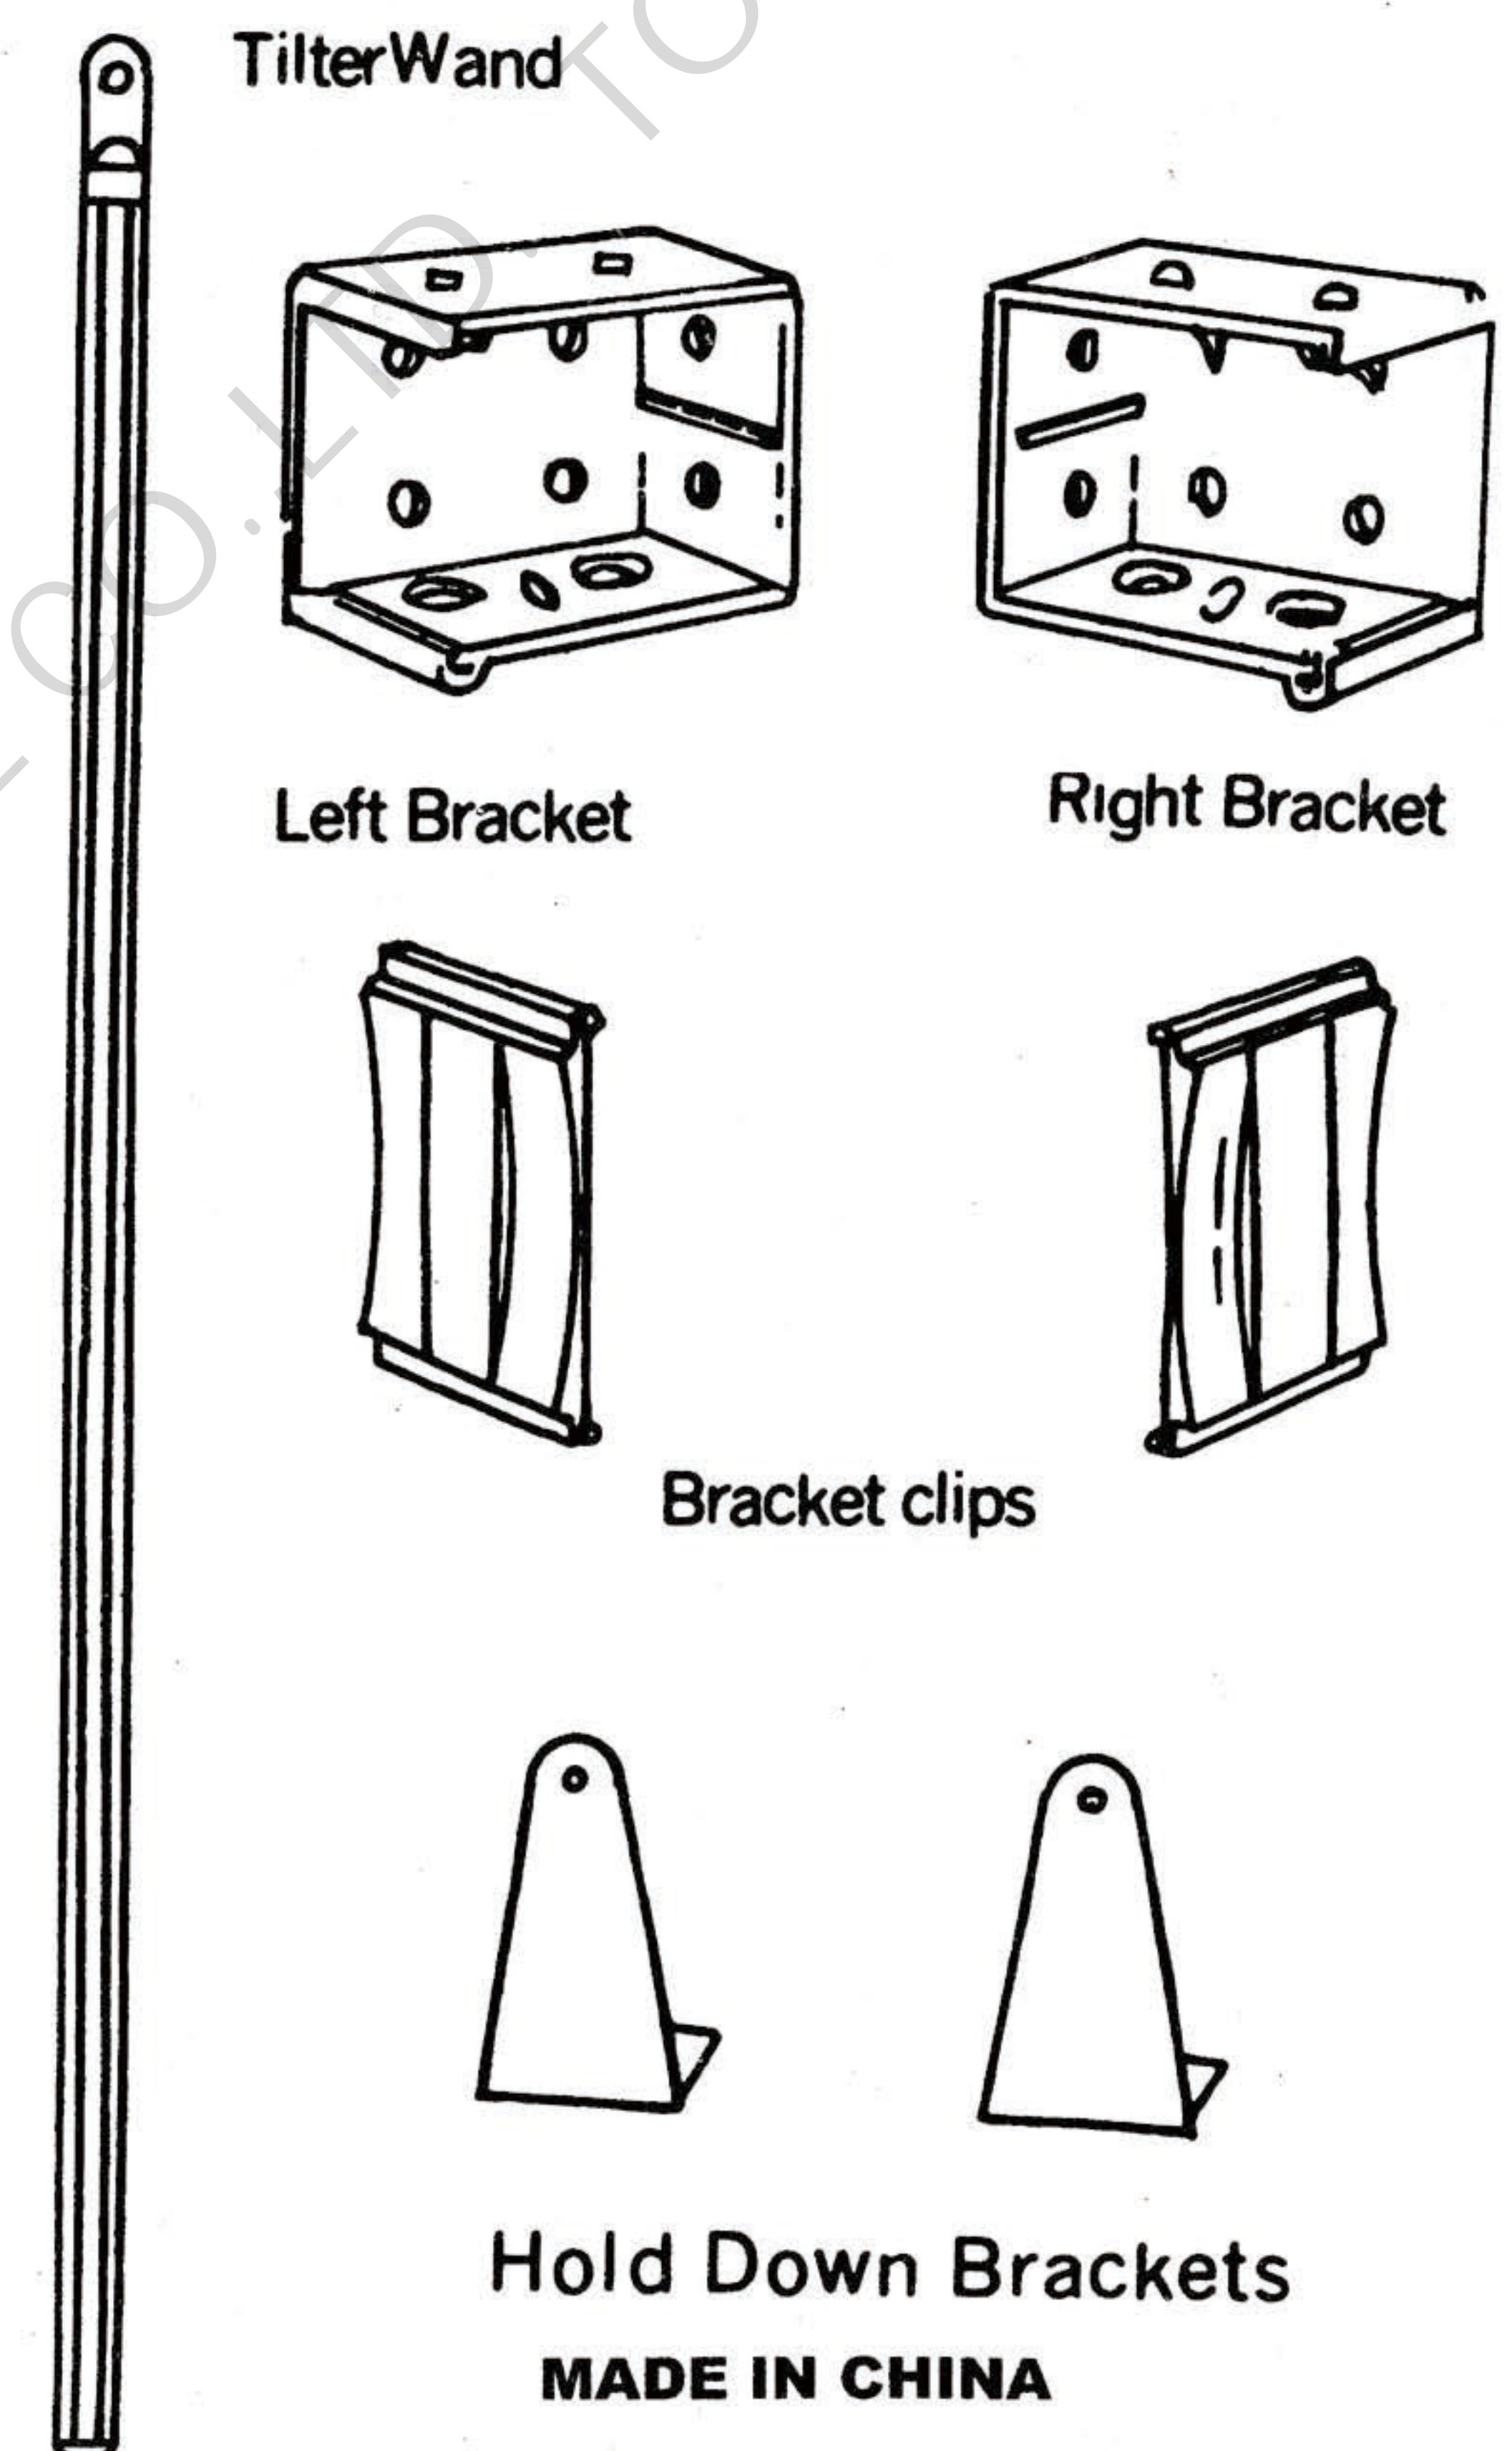

HOW TO INSTALL


1. Measure the window

With open side of brackets facing room, slide brackets onto headrail, and hold blind to the window.

Determine whether blind will be mounted inside or outside of window.


For Outside Mounting:

With brackets on headrail, hold blind at desired height, center, and mark bottom of bracket on each side. Hold bracket only to each mark and pencil screw holes. Make sure marks are level.

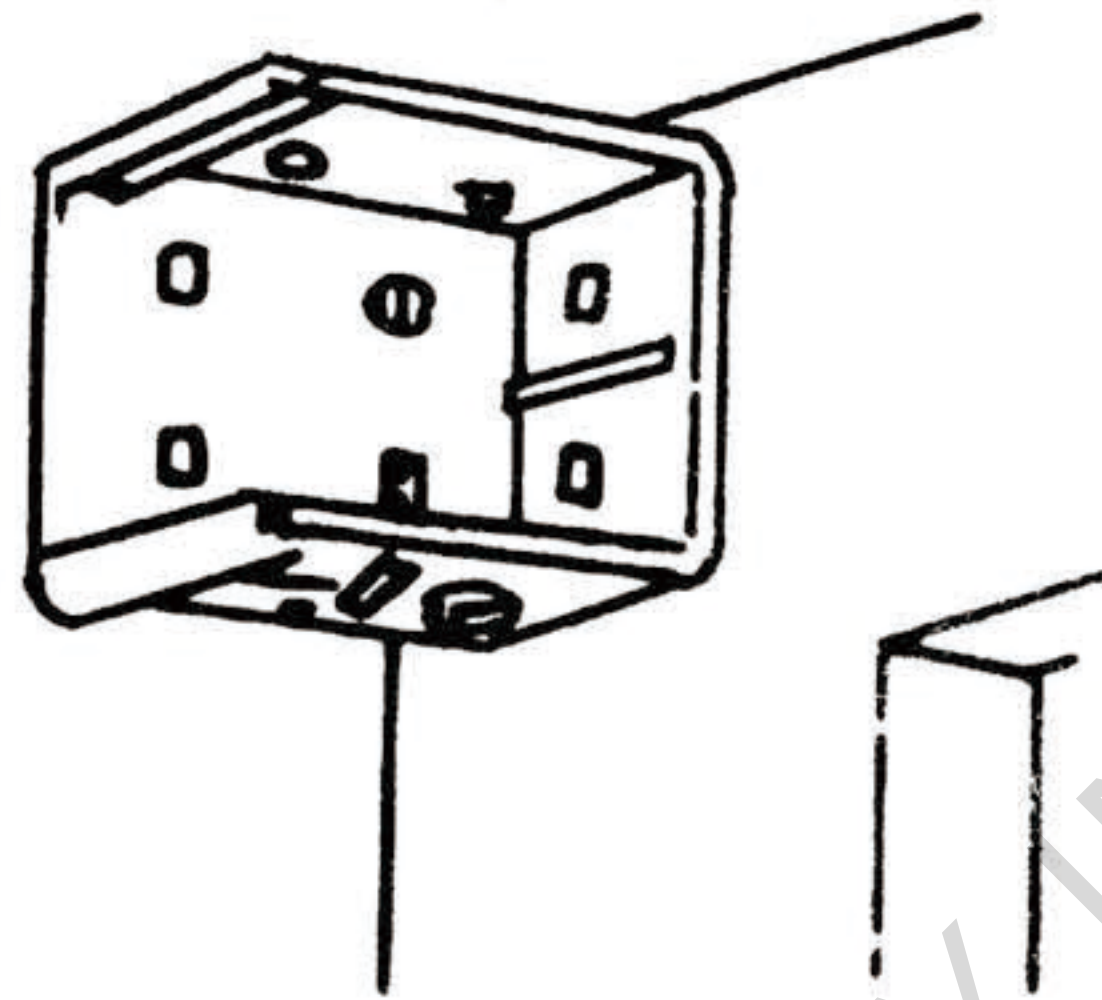

For Inside Mounting:

Mounting brackets should be flush with edges of window. However, head-rail must be mounted level. Brackets can be extended up to 1/2" on either side to provide a custom fit. Remove blind and pencil screw holes through brackets.

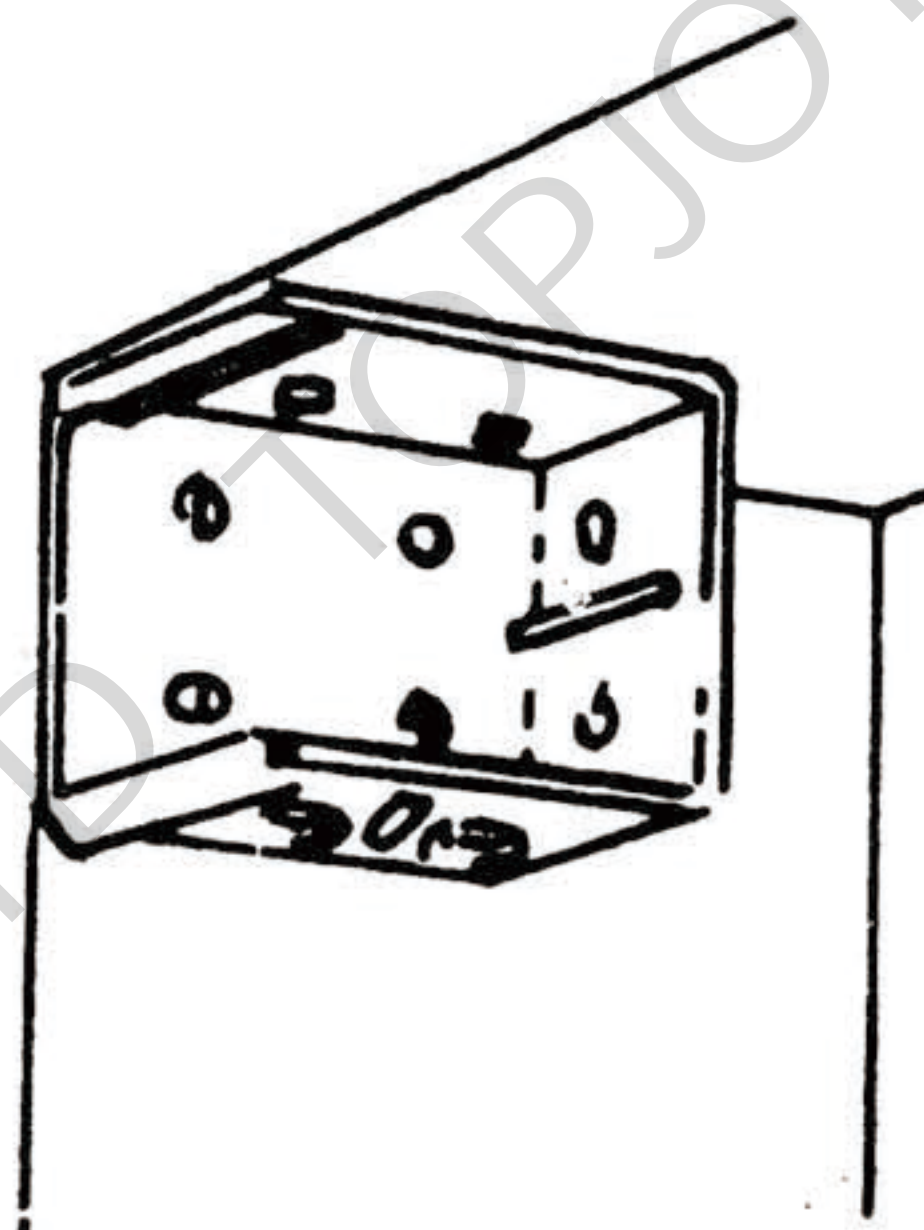


2. Install Brackets

Wood screws are provided. If possible, drill a hole for each screw. For best results, use plastic anchors when mounting to plaster or dry wall. Install center support bracket included for oversized blinds only.


3. Hang Blind

Snap headrail into brackets. Brackets will expand slightly to accept headrail and then snap back to hold blind.

IMPORTANT: Support back of brackets when snapping in headrail if brackets are mounted to drywall or plaster. This will prevent brackets from loosening.

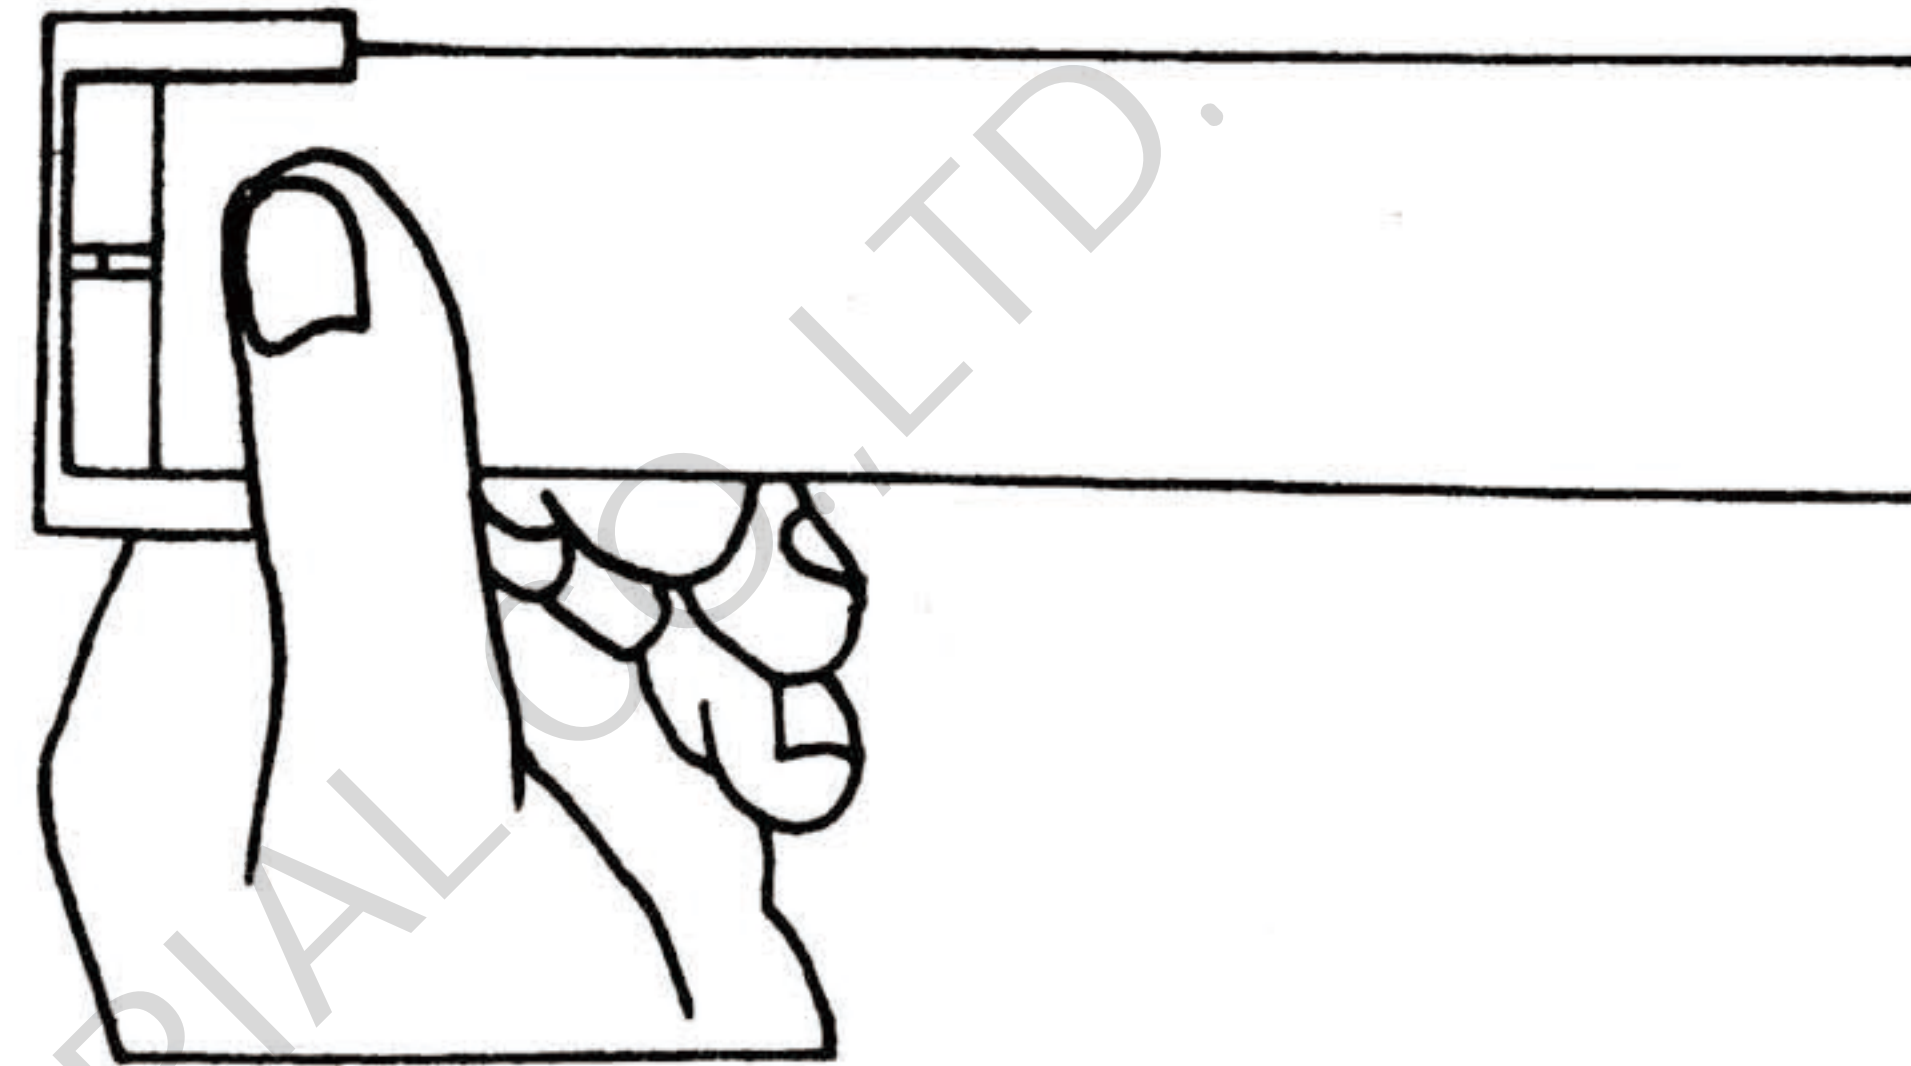

If headrail is not flush with brackets, install small screw through mounting brackets into bottom of headrail to secure.

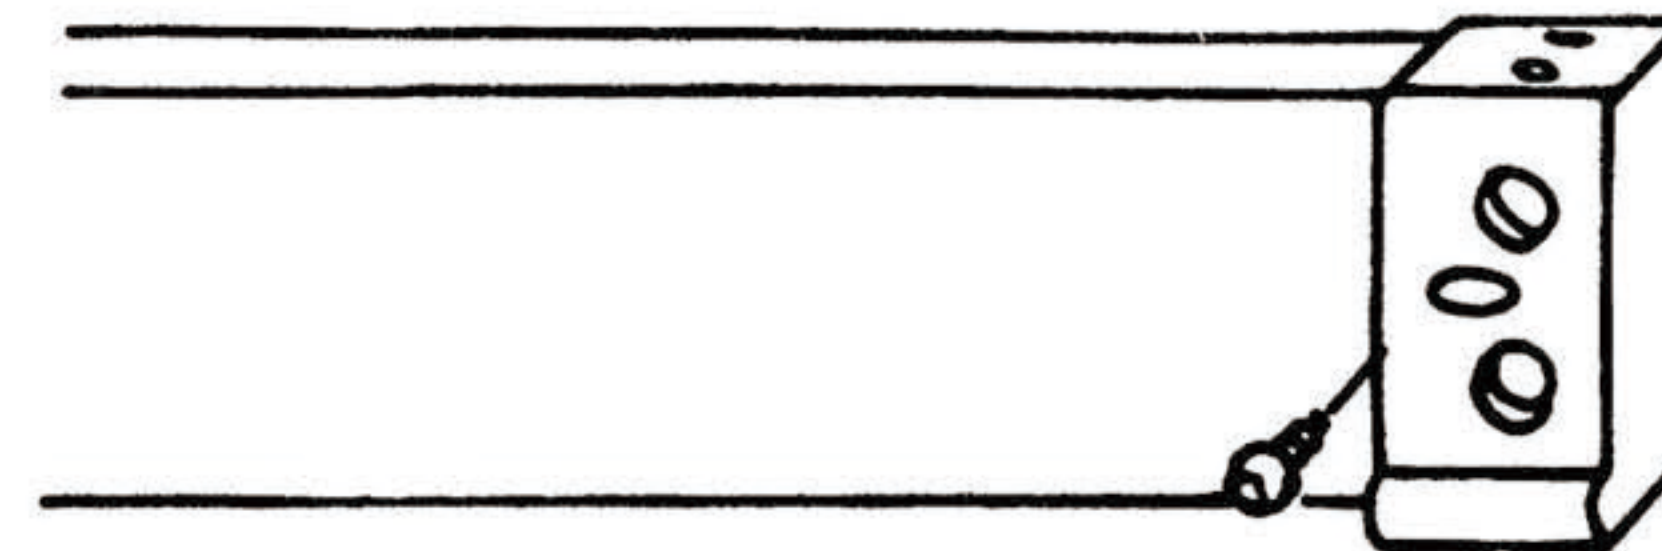

4. Insert Bracket Clips

Slide clips into grooves in mounting brackets.

5. Install Hold Down Brackets (optional)

Hold down brackets should be used only if blind is to be in a permanently lowered position. When the blind is fully lowered to the window sill pencil marks should be made on the outside ends of the bottom rail. Brackets should be lined up to the pencil marks and screwed into the window sill. Insert metal pins protruding from the brackets into the holes on both ends of the bottom rail.

HOW TO OPERATE


To raise or lower blind, pull cord to the left until cord lock releases. When desired height is reached, pull cord to the right and blind will lock. Slats should be horizontal when raising or lowering blind to prolong life of cords.

HOW TO SHORTEN

When blind is fully lowered to window sill, a truly custom fit will show no excess slats. It's easy to have this custom look by following the directions below once the blind is installed.

Note: In open position, slats are 3/4" apart. A good rule of thumb is to remove 8 slats for every six inches you wish to shorten blind.

1. Remove caps on bottom rail.

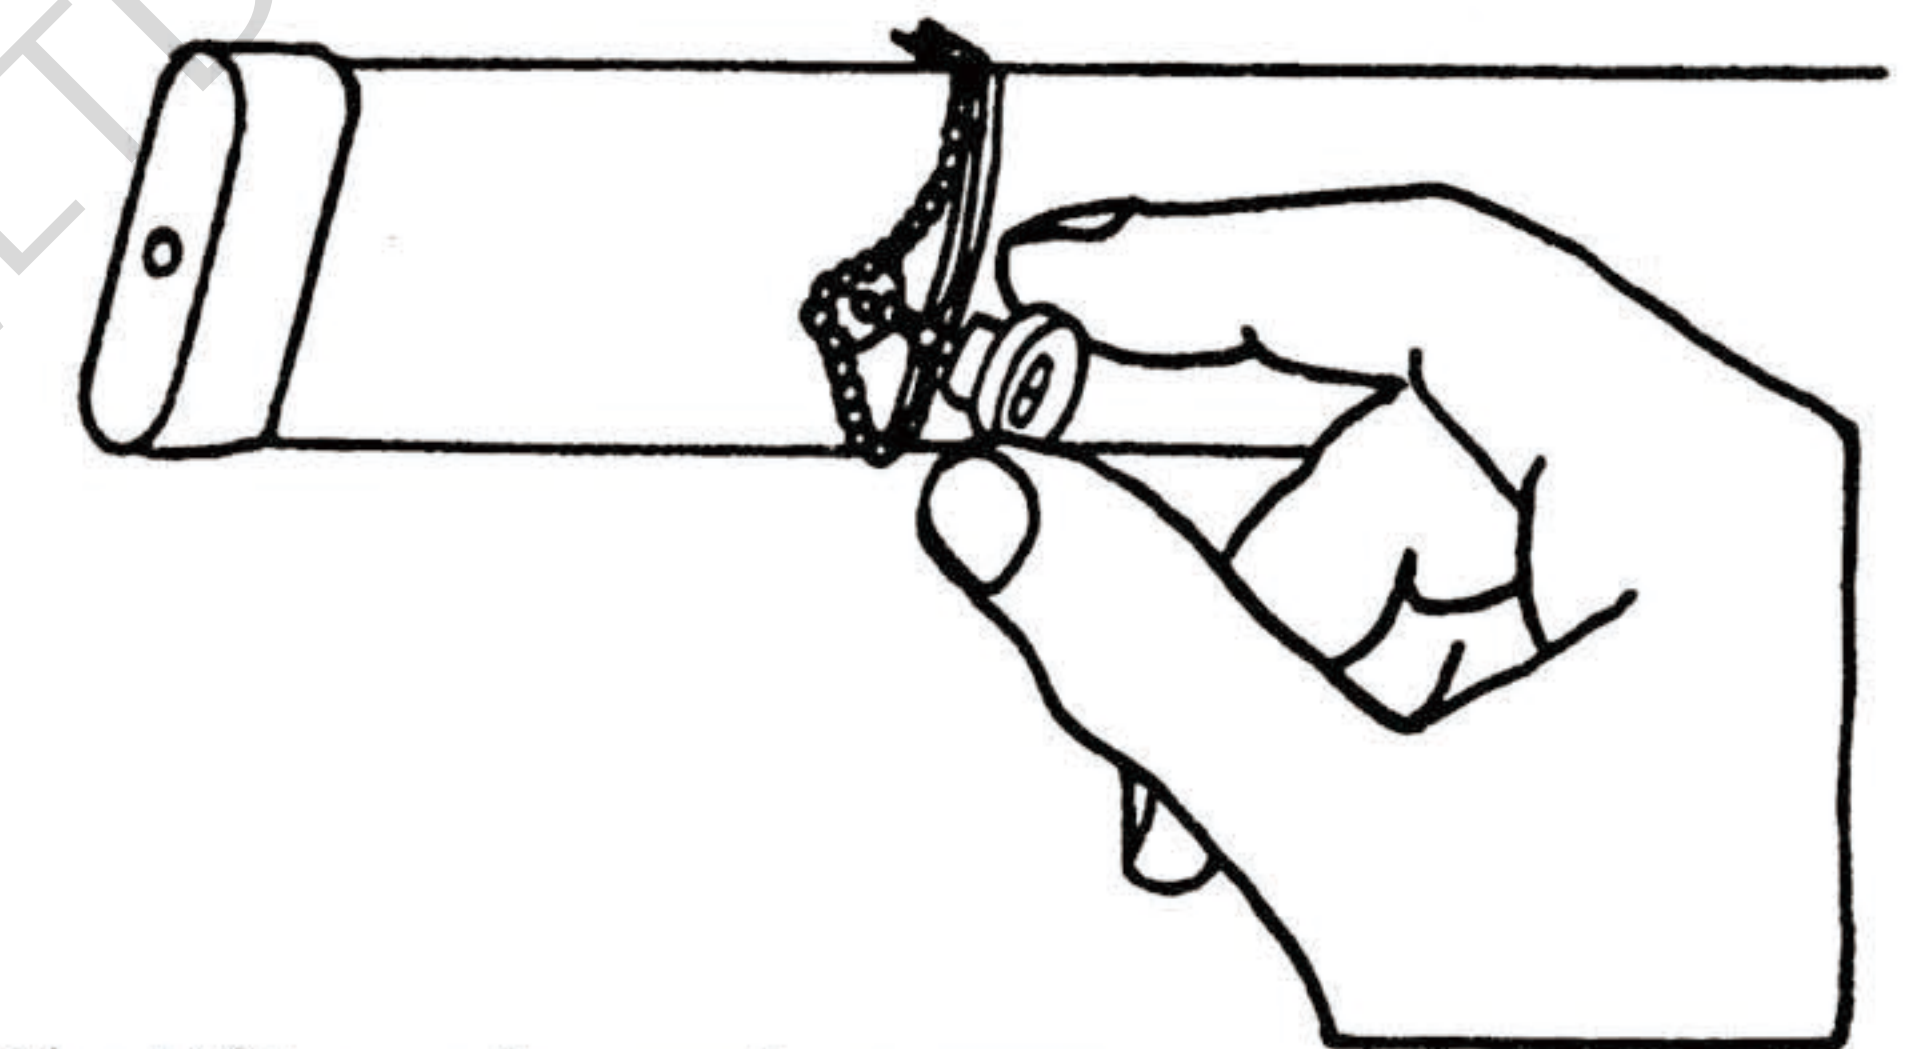

2. Untie lift cords under caps.
3. Remove bottom rail and number of slats desired.
4. Reinsert bottom rail through ladder rung that will give you desired length and retie lift cords.

